

QUICK INSTALLATION GUIDE

Introduction

This document provides a quick, simple overview to help you configure the iControl™ product at an end-user's facility.

Preparation

The following tools will be required:

1. A computer with a web browser (Internet Explorer 8 is preferred).
2. Network crossover cable (supplied in the iControl™ box)
3. The iControl™ hardware (includes the latest firmware and is pre-installed).

Installation Overview

1. Disconnect your computer from the current network connection and set the computer to a temporary IP address of "192.168.1.1"
2. Connect network crossover cable between the computer and iControl™ hardware
3. Open a web browser and type the following in the address bar: <http://192.168.1.199>
4. Login to the iControl™ Web interface by selecting "Admin" from the drop down bar and use the following for the password: admin
5. Navigate to the "Setup" menu and select "Network".
6. Change the network information to something suitable for your facility.
7. Disconnect the network cables and reboot the iControl™ hardware by pressing the reset button on the unit, or by cycling power to the unit.
8. Restore your computer's IP settings.
9. You will now be able to use your new iControl™ to manage your facility's power distribution platform.

Questions? Contact us at 1-800-645-9721 for customer support.